# **USER** MANUAL



THERMAEGH English V1.2

#### Instruction

The THERMAEGH thermostat controls the floor heating system based on built-in weekly program. The weekly program runs in 4 or 2 stages per day, 7 days a week. The default weekly program parameters can satisfy most usage scenarios. If your living habits are different, you can also modify the weekly program parameters in the thermostat or APP. When there is no one in the house, it is recommended to set the temperature down to save energy. Besides, the thermostat has built-in adaptive function. When this function acts, the thermostat heats or stops heating in advance of next stage to bring the room temperature to the set temperature of the next stage. Please note that after turning adaptive on, the thermostat takes a few days to learn the time required.

#### Symbols



#### Ground Fault Circuit Interrupter (GFCI)

This thermostat has a built-in GFCI function that protects people from electric shock. It is very important to check whether the GFCI function is normal or not every month. Here are the check stens:

#### 1 Confirm that the thermostat is turned on

2. Press the [Test Monthly] button. If a red light appears in the upper left corner of the thermostat and GROUND FAULT appears on the screen, the GFCI function is normal. If there is no response, it means the function is invalid, please contact the dealer or electrical installer. Note: Do not press and hold the [Test Monthly] button.

3. Press the [Reset] button. The red light is off and the screen shows the power off state. 4. Press the [Reset] button again. The thermostat is turned on.

If in daily use, the red light is on and the screen appears GROUND FAULT. Then you need to check if the ground fault is present by pressing the [Reset] button. If the red light is off and the screen shows the shutdown status, it is nuisance tripping. If not, it means that ground fault has occurred. Please contact your dealer or professional technician immediately.

#### WiFi connection(Only for THERMAEGH)



Step 1: Scan the QR code or download Warmme from APP store/Google browser.

Step 2: Register and log in with mobile number or email address in the APP. Attention: Please read and agree "Privacy Policy and Service agreement" before registration



Attention: If failed, please confirm the Wifi is 2.4G version and check the Wifi signals, then, use the 'AP mode' in the top right to connect again

Step 8: You can check the real-time temperature and set temperature etc. at the control interface

#### Functions and operation

#### On/Off

The GFCI Reset button is also the switch button. Press the [Reset] button to switch on and off.

#### Temporary Override Temperature

This function is enabled in the automatic intelligent mode, when the temperature demand changes at this moment, the setting temperature is enabled, but the parameters in the Event are not changed Operation method:

der the interface showing the real-time temperature, tap ▲ or ▼ to modify the set temperature. Tap **OK** to confirm and return to the interface showing the real-time temperature.

#### Mode selection

This thermostat provides three operating modes: Automatic mode: According to the weekly program, the thermostat automatically adjusts the set temperature operation.

Manual mode: The thermostat runs continuously according to the set temperature. Frost protection mode: The temperature controller runs at a lower set temperature. The temperature

range is set from 41°F to 59°F in this mode. This mode is used when you want to keep your room at a lower temperature when you are on vacation.

#### How to set the mode selecti

In the interface displaying the real-time temperature, tap **OK** to enter the first level menu, and Node is flashing.

Tap OK to enter the mode selection

Tap ▲ or ▼ to change the mode.

Tap OK to confirm your selection. Tap OK to confirm your selection. If you select manual mode or freeze protection mode, you also need to tap ▲ or ▼ to set the

Tap **OK** to return to the interface showing the real-time temperature.

#### Key lock

The thermostat provides a key lock function to prevent the thermostat setting parameters from being incorrectly modified. Note: the [Reset] button and the [Test Monthly] button can still operate normally so as to response

Set the key lock mode:

. Under real-time temperature interface, press and hold until the lock symbol appears.

2. Under real-time temperature interface, tap OK to enter the first level menu, and Mode is

Tan ▲ or ▼ to select Key Lock

Tap **OK** to enter the key lock setting. Tan OK to confirm

Tap **OK** to return to the interface showing the real-time temperature.

Cancel the key lock mode Under real-time temperature interface, press and hold 🛛 until the lock mark on the screen

#### Weekly program parameter setting

In the automatic mode, the thermostat runs automatically according to the setting parameters of the weekly program. The weekly program parameters contain two parameters: Schedule and Event. 1. Schedule

Assign seven days a week to the following two schedules:

5+1+1: The Event parameter is the same from Monday to Friday, with separate Event parameters

on Saturday and Sunday. 7: With separate Event parameters every day

Schedule parameter setting method.

Under real-time temperature interface, tap **OK** to enter the first level menu, and Mode is flashing. Tap  $\blacktriangle$  or  $\nabla$  to select Schedule.

. Fap **OK** to enter the parameter settings

Tap ▲ or ▼ to select a parameter

. Tap **OK** to confirr

#### Tap OK to return to the real-time temperature interface.

2. Event

In the Home scenario, the day is divided into four events: Wake-- 🔅 Leave-- 🕆 Return-- 🏦 Sleep-- 🍊 (In the Office scene, the day is divided into two phases; on work--- off work--- (, ). The set emperature for each stage can be set separately

#### Event parameter setting method: Under real-time temperature interface, tap **OK** to enter the first level menu, and Mode is flashing.

Tap ▲ or ▼ to select Event. Tap **OK** to enter the week selection. Tap  $\blacktriangle$  or  $\blacksquare$  to select the day you want to modify the parameters. Tap **OK** to enter the stage selection for the day. Tap  $\blacktriangle$  or  $\forall$  to select the stage that you want to modify the parameters. Tap **OK** to enter the temperature setting of the current phase. Tap ▲ or ▼ to select the temperature value you want to set. Tap **OK** to enter the hour setting for the start time of the current phase Tap ▲ or ▼ to select the hour of the start time. Tap OK to enter the minute setting for the start time of the current phase Tap ▲ or ▼ to select the minute of the start time Tap **OK** to return to the stage selection for the day.

te: Return to the interface of the real-time temperature and tap 🖬 multiple times.

#### Event default parameter list

Home								
Week	Wake 3	Wake Leave D Return 1		Ì	Sleep	(.		
	Start time	Tempera- ture	Start time	Tempera- ture	Start time	Tempera- ture	Start time	Tempera- ture
MonFri	6:00	78°F	8:00	69°F	17:00	78°F	22:00	69°F
SatSun	8:00	78°F	8:30	79°F	17:30	78°F	22:00	69°F
Office								
Week on-work 🔅			off-work	(				
	Start time	Tempera- ture	Start time	Tempera- ture				
MonFri	7:00	78°F	18:00	69°F				
SatSun	7:00	68°F	18:00	69°F				

#### Settinas

In addition to the above common functions, the thermostat also provides a number of settings for more occasions. It should be noted that such settings need to be set by professional technicians to avoid damage caused by abnormal settings.

Settings access method: Under real-time temperature interface, tap **OK** to enter the first level menu, and Mode is flashing. Tap  $\blacktriangle$  or  $\forall$  to select Settings.

Tap OK to enter Settings. Settings contains the following items:

#### 1.Time

Set the current real time and day of the week Note: The WiFi version of the thermostat will automatically update to local time after networking

- Time setting method:
- After entering Settings, tap ▲ or ▼ to select Time. Tap **OK** to enter the hour setting for the time.
- Tap ▲ or ▼ to select the hour value for the current time
- Tap OK to enter the minute setting for the time.
- Tap  $\blacktriangle$  or  $\blacktriangledown$  to select the minute value for the current time. Tap **OK** to enter the day of the week setting.
- Tap ▲ or ▼ to select the day of the week.
- ap **OK** to enter the hour setting for the time.

Tap 📕 multi times to return to the real-time temperature interface.

#### 2. Temp unit

°F or °C can be selected as the temperature unit Temp Unit setting method: After entering Settings, tap  $\blacktriangle$  or  $\triangledown$  to select °F/°C. Tap **OK** to enter the selection. Tap ▲ or ▼ to select the desired temperature unit. Tap **OK** to confiri Tap OK to return to the real-time temperature interface.

#### 3.Sensor type

This thermostat can be connected not only to the floor sensor but also to two other commonly used floor sensors. When replacing the old thermostat, there is no need to replace the floor sensor for easy installation. Sensor Type setting method: After entering Settings, tap ▲ or ▼ to select Sensor Type Tap OK to enter the selection. Tap ▲ or ▼ to select the type of floor sensor you are currently using.

Tap **OK** to confirm. Tap **OK** to return to the real-time temperature interface.

No.	Sensor Type	Parameters
00	3950(default)	
01	3600	R(25°C)=12kΩ R(10°C)=22.2kΩ
02	3700	R(25°C)=10kΩ R(10°C)=19.1kΩ

#### 4.Sensor selection

In addition to the floor sensor, this thermostat has built-in sensors to detect room temperature Therefore, three sensor applications are available:

#### Room: Controls room temperature based solely on built-in sensors

Floor: Controls the floor temperature based solely on the floor sensor. Room.Limit: Controls the room temperature based on the built-in sensor while monitoring the floor temperature not to exceed the upper limit. This application, like Floor, can be used in places such as

wood floors where floor temperature is critical

After entering Settings , tap ▲ or ▼ to select Calibration

Tap OK to go to select Room or Floor . Tap ▲ or ▼ to select Compensate Built-in Probe or Floor Sensor.

Sensor Selection setting method: After entering Settings, tap ▲ or ▼ to select Sensor Selection

Tap OK to enter the selection

Tap ▲ or ▼ to select the sensor application type.

Tap OK to confirm

Tap OK to return to the setting item selection.

Tap OK to go to select Office or Home.

Tap **OK** to return to the real-time temperature interface.

After entering Settings,  $tap \blacktriangle or \lor to select Adaptive.$ Tap **OK** to enter the selection. Press  $\blacktriangle$  or  $\lor$  to get Yes or No.

Tap  $\blacktriangle$  or  $\triangledown$  to select one. Tap OK to confirm

Adaptive setting method:

Tap **OK** to return to the real-time temperature interface. Note: If Room.Limit is selected, you need to set the maximum temperature that the floor can accept.

Tap **OK** to enter the compensation setting. Tap ▲ or ▼ to adjust the real-time temperature to match the displayed temperature value of the

This thermostat has an adaptive function. When this function is enabled, the thermostat heats up or

stops heating in advance so that the next stage comes and the temperature just reaches the set

This thermostat is suitable for use in both homes and offices. For the office, a set of weekly

program parameters is built in. See the Weekly Program Parameters section for det. Location setting method: After entering Settings, tap ▲ or ▼ to select Location.

#### 5. Calibration This thermostat has built-in probe and floor sensor calibration function. In the case of demand for higher precision

Calibration setting method:

calibration instrumer

6. Location

7.Adaptive

mperature

Tap **OK** to confirm. Tap **OK** to return to the real-time temperature interface.

#### 8.Readout

This thermostat has the function of calculating the percentage of heating time over a period of time The relevant parameters can be queried through the Readout item. Readout query method:

After entering Settings, tap ▲ or ▼ to select Readout. Tap **OK** to enter the selection. Tap ▲ or ▼ to select 1Day, 30Days or 365Days to query.

Tap OK to return to the setting item selection

#### 9.Factory reset

mostat has the function of restoring factory parameters. This the

Factory Reset setting method: After entering Settings, tap ▲ or ▼ to select Factory Reset.

Tap OK to enter the select Tap ▲ or ▼ to select Yes or No.

Tan OK to confirm

Tap **OK** to return to the real-time temperature interface.

Settings default parameter list

NO.	Name	Default Parameter	Setting Range
1	Time	1	1
2	°F/°C	°F	°F °C
3	Sensor Type	00 3950	00 3950 01 3600 02 3700
4	Sensor Selection	Floor	Room FLoor Room.Limit
5	Calibration	0°F	-9°F 9°F
6	Location	Home	Home Office
7	Adaptive	No	Yes No
8	Readout	1	/
9	Factory Reset	No	Yes No

#### Troubleshooting

E1: Built-in probe failure, please contact your dealer or professional technician. E2: External probe failure, please contact your dealer or professional technicia

#### Installation

1.Loosen the bottom screw by a Phillips screwdriver. Then open the thermostat from the upper right side as shown. Note: Screw the nut out of the groove and do not need to unscrew it. 2. Wire as shown: R 5 L/N lead: Connect the power cord using the terminal block. L1/N1 lead: Use a terminal block to connect the load line IN/SNR terminal: Connect the floor sensor OUT terminal: Connect to IN/SNR of Power Module. Note: Disconnect the main power supply before wiring. If an electric floor heating cable or mat system requires more than 15 Amps, install a power module Wiring diameter: 12 to 22 AWC 3. Install the back



4. Fit the left side of the front and rear covers as shown.Rotate to the right again and press the upper half of the right border until you hear a click. Use a screwdriver to secure the bottom screw. Turn on the power and test the GECI function

#### WARNINGS

To avoid risk of electric shock, disconnect all power coming to

heater at main service panel before installation of the thermostat. Keep air vents of thermostat clean and free from obstructions. All wiring must conform to local and national electrical codes and ordinances. Installation must be carried out by qualified personnel.

#### Classification

The thermostat is a Class II device (reinforced insulation) and used for controlling electrical floor heating. The product must be connected to the following leads: L/N lead: Connect the power cord using the terminal block.

L1/N1 lead: Use a terminal block to connect the load line(Max 15A).

Electric floor heating cable/mat must be in accordance with the supply voltage The terminals are designed to handle a cross-section of wire measuring 12-22AWG.

#### Technical specification

Supply voltage: GFCI:

Dimension(Inch)

120/240 VAC 50/60 Hz Class A (5 mA trip level) Temperature range: +5 to +45°C / +41 to +113°F Load: Setpoint range:

max.15 A (resistive load) +5 to +40°C / +41 to +104°F





# **Quick Guide of Using Google Home to Control Smart Devices**

## 1. What you need to get started

Before using Google Home to control your devices, make sure you meet the following conditions.

- ✓ A Google Home device, or Android phone with Google Assistant.
- ✓ Latest Google Home app.
- ✓ Latest Google app (Android only)
- ✓ A Google account.
- $\checkmark$  The device display language must be set to English US.
- ✓ Smart Life app and a related account.
- ✓ Smart devices.

## 2. Add devices in Smart Life app (Refer to App Instruction)

You can skip this part if you've already add some devices to your Smart Life account, and in the meantime the devices' name are easily recognized.

## 2.1 Download Smart Life app (Refer to App Instruction)

You can scan the QR code below to download the Smart Life app:



You can also search "Smart Life" in either App Store or Google Play to install the app.

## 2.2 Register a Smart life account and sign in the app (Refer to App Instruction)

Open the Smart Life app, tap "Register" to register an account, then sign in the app.

## 2.3 Add device and change device's name (Refer to App Instruction)

Sign in with the Smart Life account, add the device, then change device name to a easily recognized word or phrase, like "bedroom light".

## 3. Set up Google Home and configure in Home Control

Configuration needs Google Home app. Search "Google Home" in App Store or Google Play to install the app.

### 3.1 Set up Google Home with Google Home app

You can skip this part if your Google Home is already set up.

- 1. Make sure your Google Home is energized.
- 2. Open the Google Home app by tapping the app icon on your mobile device.
- 3. Tap "ACCEPT" to agree to the Terms of Service and Privacy Policy. Allow Google Home app to access the device location to discover and set up nearby devices.



4. Tap "SIGN IN", choose one Google account that you already logged in on your mobile device. Or follow the instructions to sign in with a new Google account.

<b>↓ O ↔ ♥</b> 0 <b>0</b> 0652	8 O ↔ ♥ 2 0 0653	<b>8 O ↔ 1</b> 2 <b>0</b> 0653
Welcome to Google Home	Welcome to Google Home	Welcome to Google Home
Ť: M		Stay up-to-date with the latest from Google Home Receive enable with tips & tricks, new features, apps, offers, and more. You may sait out of receiving enable at any time. Allow enabl netficiations
Sign in to the Google Home app for a better experience	Sign in to the Google Home app for a better experience	
	🤹 śmartike cnanartikejigmal.com 💌	
BENN >	CONTINUE AS SMAATUFE	CONTINUE >

5. The Google Home app scans nearby devices that are energized and are ready to set up. Tap "SET UP" to set up your Google Home.



6. When Google Home app is successfully connected to the Google Home device, tap "PLAY TEST SOUND", it will play a test sound to confirm you are connected to the right device. If you heard the test sound tap "I HEARD IT".

•	8 (D ++ 12 2 8 06.58	• IO+TOIO	859 Ø 80+11280	659 ♦ <b>8 (0 ++ 1</b> 1 = 07:00
Google Hame setup		Google Home setup	2 Google Home setup	Coogle Home setup     I
Google Home found There are just a few steps personalize your Google H	to set up and ome	Connecting to Google Home	Next, your Google Home will play a test sound This is to confirm that you've connected to the right Google Home	Thid you hear the sound? If you did, great Hest you'll connect Google Home to your NH-FL If you don't hear the sound, by again.
	CONTINUE >		PLAY TEST BOUND	TRY AGAIN I HEARD IT >

7. Select the Room (ex Living Room) where your Google Home is located. This helps you identify the device when you want to cast to it. Choose the Wi-Fi network you want to connect to your Google Home. To automatically fetch the password for this network on this device, tap "OK", then the password will populate in the password field. You can also manually enter your password. Then tap "CONTINUE".

⊕ 8 O m ♥ 2 8 0200	<b>I O ↔ 1</b> 2 <b>I</b> 0700	8 en 🐨 2 🛢 07:98
Google Home setup I	Google Home setup	Google Home setup
What room is your Google Home in?	Connect Google Home to your NI-FI	Connect Google Home to your Wi-Fi
This helps name your Google Home so it's easier to identify in the Google Home app.	Buye 🛛 🖉 👻	the Willpervert
Send Google Home device usage data and crash reports to Google     Help us double to space the quality of your dougle Home experimon.	NO THRAKS ON	(Using Writi password from this mobile device)
	MAC address: PAPEDRDPRCA	MAC address FAFEDED/TRUCK
сонтные >	CONTINUE >	сонтные >

8. Google Home will now attempt to connect to the provided Wi-Fi network. When Google Home is successfully connected to your Wi-Fi network, tap "CONTINUE".



9. In order for the Google assistant to answer your questions and to enjoy a personalized experience, you must sign into your Google account, then tap "SIGN UP". Choose the Google account you want to link to your Google Home device, then tap "CONTINUE AS XXX". Enter the address where this Google Home is installed, and select your default music service.

8 🐨 2 🛙 01:44	a ♥ 2 a 1949	8 🖤 12 🛔 1950	a ♥ 2 à 1950
Configuring device	Configuring device	Google Home setup	Google Home setup
<image/> <section-header></section-header>	Set Google Home's location Get info about local wanths; traffic, businesses, and more 96 2 Jipophas Road Hangatos, 2 hijiang, Onia	Cet the most out of your Google Home Say up to date on new features, apps, offers, and new for your device and your Google Assistant Cet e-mail notifications	Link your music services, then select a default Google Home works with multiple services. Your default service will be used first when possible.
SKIP ALLOW 3	SKIP SETLOCATION >	CONTINUE >	неця сонтакие >
	• • •		• • •

10. Tap "SKIP TUTORIAL" to finish the setup. You can also tap `CONTINUE` to watch the Google Home tutorial.



## 3.2 Link Smart Life account in Home Control

1. Tap "Home Control" in the hamburger menu on the Google Home app's home page, then tap "+".

	10-17	10111		10	🕶 🕷 12 🚊 20:14				1014
= Home		08	1000	- Gi 🤮	<b>-</b>	÷	Home control		ł
LISTEN	phone	<u> </u>			22.00.00		DEVICES	ROOMS	
Disciple Pay Music Translag row	100	n. 1079-	Cast screen	/ audio		G C Anato Natio	1 Ö Alte on Google Home and An es	droid 6.3+ phones and	
		Sill a	Googie Assistant	ık.					
Holfber F&R	Todaya Chendren Hila	Seel-G	J Music	6l	inter Training		You haven't added a	ny devices yet	
			III Shopping In	4					
MT MUSIC & AUDIO APPS			Devices						
Name of Street			Account pr	ferences				9	Ð
	•		•	•			• •		

 Find "Smart Life" in the list. In the new window, select your Smart Life account's region, type your Smart Life account and password, then tap "Link Now". After you assign rooms for devices, your devices will be listed in the Home Control page.

		1 O H 1 2 2 214	10+	★ 2 2015				1000			
÷	Add devices	1	🗙 🌲 https://pxt.us.wgine.com	1 4	- Ass	ign rooms	0014		÷	Home control	1
0	NuBryte				beda	som light		/		DEVICES	ROOMS
۲	OSRAM LIGHTIPY (US)				140.0	- addiger Fold in				0	Anthoid 6.2+ phones and
0	Philips Hue								webch	8	
0	Plum		Account						Smart	Life	
iller w	Samsung ARTIK Cloud		t e traduction organismo						0	bedroom light Bedroom	
۲	SmartLife		Type pair passes then								
P	Smartika		Link How								
Θ	SmartThings										
0	TP-Link Kasa										
1000	Universal Devices										÷
⊕	Voice UPB Bridge										
	•		• •		•					4	

## 4. Control your smart devices through Google Home

Now you can control your smart devices through Google Home. Take bedroom light as the example, the supported voice commands are as below:

- ➢ Ok Google, turn on/off bedroom light.
- ➢ Ok Google, set bedroom light to 50 percent.
- > Ok Google, brighten bedroom light.
- > Ok Google, dim bedroom light.
- > Ok Google, set bedroom light to red.

# 

## 3-YEAR LIMITED WARRANTY FOR MP GLOBAL THERMOSTATS

MP Global warrants this product to be free from defects in the workmanship or materials, under normal use and service, for a period of **three (3) years** from the date of purchase by the consumer. If at any time during the warranty period the product is determined to be defective or malfunctions, MP Global shall repair or replace it (at MP Global's option).

If the product is defective:

(i) return it, with a bill of cale or other dated proof of purchase, to the place from which you purchased it, or

(ii) call MP Global Customer Care at 1-888-379-9695. Customer Care will make the determination whether the product should be returned to the following address: MP Global Return Goods, 2500 Old Hadar Rd., Norfolk, NE 68701, or whether a replacement product can be sent to you.

This warranty does not cover removal or reinstallation costs. This warranty shall not apply if it is shown by MP Global that the defect or malfunction was caused by damage which occurred while the product was in the possession of a consumer. MP Global's sole responsibility shall be to repair or replace the product within the terms stated above. MP GLOBAL SHALL NOT BE LIABLE FOR ANY LOSS OR DAMAGE OF ANY KIND, INCLUDING ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING, DIRECTLY OR INDIRECTLY, FROM ANY BREACH OF ANY WARRANTY, EXPRESS OR IMPLIED, OR ANY OTHER FAILURE OF THIS PRODUCT. Some states do not allow the exclusion or limitation of incidental or consequential damages, so this limitation may not apply to you.

THIS WARRANTY IS THE ONLY EXPRESS WARRANTY MP GLOBAL MAKES ON THIS PRODUCT. THE DURATION OF ANY IMPLIED WARRANTIES, INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, IS HEREBY LIMITED TO THE THREE-YEAR DURATION OF THIS WARRANTY. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

This warranty gives you specific legal rights, and you may have other rights which vary from state to state.

If you have any questions concerning this warranty, please write MP Global Customer Relations, 2500 Old Hadar Road, Norfolk, NE 68701 or call 1-888-379-9695.

THERMO 0318